

1) SOUND SETTING

This option let you decide if you want the device to produce sound via a beeper

- 1:ON The beeper in ON.
- 3:OFF The beeper in OFF.



```
SOUND SETTINGS
1:ON 3:OFF
```

Initial Screen



```
Sound Activated
```

Button 1



```
Sound Deactivated
```

Button 3

2) FAILED ATTEMPTS

This option let you decide how many times the opponent is aloud to enter wrong password.

Valid Inputs:

0: unlimited times

1-9 Times of wrong entrees.

If the wrong times reach zero the bomb is detonated

To processed enter a number (0-9) and then press # key.

If you don't insert any number the default is 0 (unlimited times).



```
FAILED ATTEMPTS
5_ 0:unlimited
```

3) ENTER PASSWORD

Here you enter the password that will protect the device and the opponent must know to defuse the device.

Valid Inputs

Number : 0-9

English Alphabet: a-z

Symbols: @,#,&


If you press one time the key will appear the number but if you press more times the same key a letter will appear on the LCD as shown in the following table.

Button	One Push	Two Pushes	Three Pushes	Four Pushes
1	1	a	b	c
2	2	d	e	f
3	3	g	h	i
4	4	j	k	l
5	5	m	n	o
6	6	p	q	r
7	7	s	t	u
8	8	v	w	x
9	9	y	z	
0	0	@	#	&
*	Delete			
#	Enter			

If you want to erase a character you can do that by pressing the * button.

To proceed to the next step enter the password (null password are not allowed) and then press # key.

The maximum allowed keys are 16

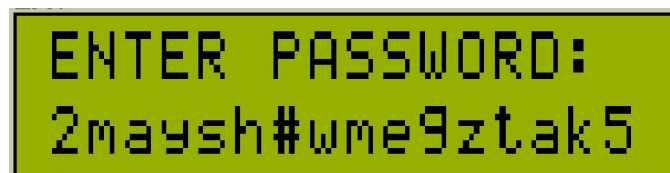

4) ENTER TIME (min)

Here you enter the time of the count-down measure in minutes

Valid Inputs

1-999 minutes (999 min= ~16.5 hours)

To start the count-down enter the time and then press # key. If you want to erase a digit simply press * button.



ENTER TIME (min)
999_

5) DETONATE IN

Now you are in the count-down mode. When the timer or the wrong attempts (if you have enable this option) reach zero the bomb will detonate "BOOMMMMMMM". When you press a button you enter in the mode to enter the password for disarming the device. If you have enable the FAILED ATTEMPTS option each time that you enter wrong password the counter will drop by 1.



DETONATION IN
998:57sec



WRONG PASSWORD
TRY AGAIN :)

Wrong Password

And if you have enter a number different from 0 in the FAILED ATTEMPTS



ATTEMPTS LEFT...
4

Attempts Left

If the opponent do not manage to deactivate the bomb. The beeper will have a constant tone for 30 seconds.



BOOMMMMMMM

The opponent manage to successfully deactivate the bomb



BOMB DEFUSED
